 


VINGTOR analogue telephone DT-800M

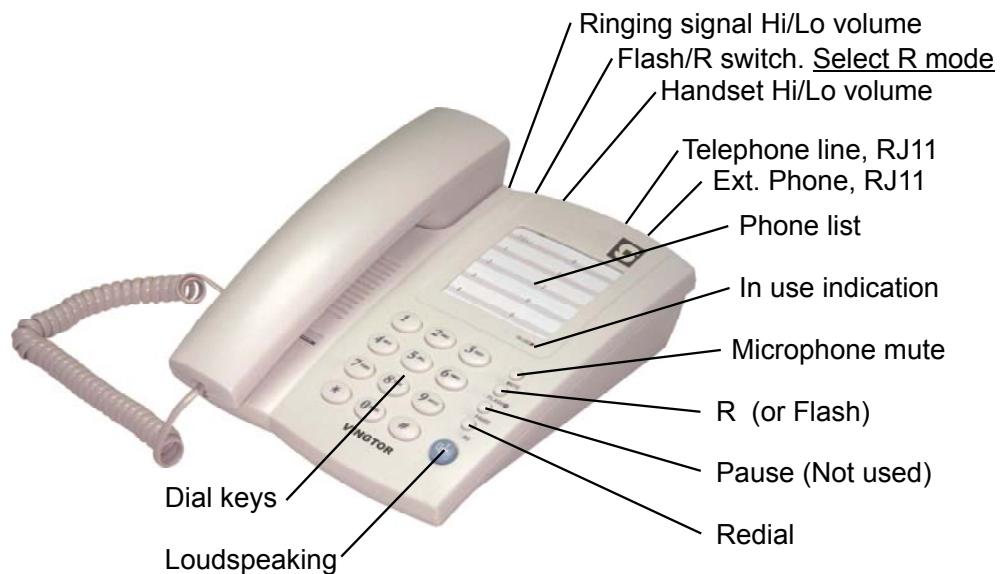

ACM Telephone System

ACM-M-A-V2



Basic Functions

The functions and codes are the same for all analogue telephones.
Some analogue telephones have special feature keys which are needed for some of the described functions.

Establish internal telephone call



- Lift handset
- Dial number of desired phone
 - Call is set up when remote phone handset is lifted
- Replace handset to end the conversation

Establish external telephone call



- Lift handset
- Dial trunk access code (default = 001) to get external dial tone
 - Optional: Enter user and PIN code for call authorization for call billing. See programming list for actual code.
- Dial external phone number
 - Call is set up when handset on remote phone is lifted
- Replace handset to end the conversation

Receive call in noisy area



- For calls in noisy areas, the telephone line will be connected in parallel to a signal unit.
- Signal unit will provide visual or audio indication on incoming call
 - Lift handset to receive call

Public address (PA) call



- Lift handset
- Dial 84 for general PA call without zones
 - Call is set up towards the PA system
 - System plays a DING-DONG to the PA system
- After DING-DONG, speak into handset for PA announcement
- Replace handset to end the PA call

Microphone mute

 
Only for telephones with MUTE button.



- Press and hold the MUTE button to block own microphone during conversation
- Release the MUTE button to re-open the microphone

Re-dial

Only for telephones with REDIAL button.

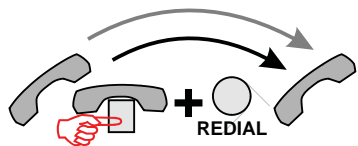


- Replace handset or push the handset switch
- Lift handset
- Press the REDIAL button to repeat last dialed number
Redial can not be used for external calls

PBX Functions

Inquiry call

 
Only for telephones with R button.

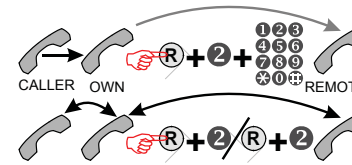

- Press R+2 during conversation
- Dial number of desired phone
 - Call is set up when handset on remote enquired phone is lifted
- Press R+2 to toggle between the phones
 - The other conversation will be parked
- Replace handset to disconnect both phones


Call transfer

 Only for telephones with R button.

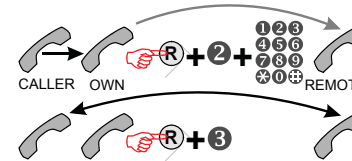


- Press R+2 during conversation
- Dial number of desired phone
 - Call is set up when handset on remote enquired phone is lifted
- Press R+3 to transfer the call
- Replace handset to withdraw from conversation
 - The two other phones will remain in conversation

 Call forwarding




- Lift handset and dial 71
- Dial remote phone number you want calls forwarded to
- Press the * button to confirm
- Replace handset
 - Own phone will ring for ca. 10 sec. when called, then forwarded if not answered
- Dial 70 from your own phone to cancel Call forwarding

 Follow me

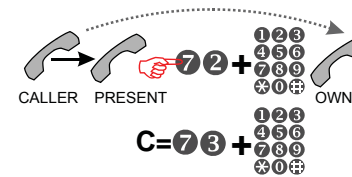

- Lift handset on the phone you want calls to be transferred to
- Dial 72
- Dial your own phone number
- Replace handset
 - Own phone will ring for ca. 10 sec. when called, then transferred to present phone if not answered
- Dial 73 + own phone number to cancel Follow me

 
Busy notify



- If the called station is busy, dial 57 or press the * button to send an attention tone (3 beeps) to the busy stations.

Call priority and busy override

 Only a selected set of telephones will have option for busy override.



- If caller get busy tone, dial 58 or ** for busy override
 - The other call is disconnected and the priority call is set up