

Line Connection

AA702 - AA708 - AA709

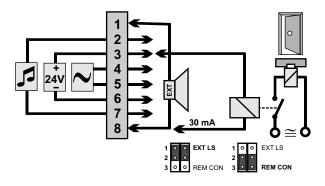


AA711 ABCD000G 123 Strap field default 1 2 3 24V ٦ 5 8 •••• ••• A B C D "6" 0000 ABCD • • G 0 0 0 G 🛛 🖸 G 1 2 3 1 2 3 123 "5" ABCD Front view


AA703 - AA704 - AA705 - AA706 BC735 - AB731, A, F, AF

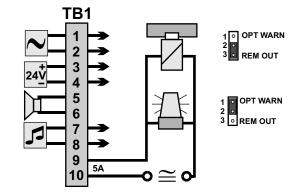

External Connections

 AA703 - AA704 - AA705 - AA706 BC735 - AB731, A, F, AF

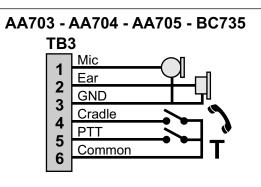



AA703 - AA704 - AA705 - AA706 - BC735 AB731, A, F, AF
--

4

ON OF	1 F	2	U4
	VO	LUME	Ξ
	SW1	SW2	LEVEL
high	ON	ON	4
	OFF	ON	3
	ON	OFF	2
low	OFF	OFF	1

Number Programming

Switch Package U2

	STATION NUMBERS							GRO	OUP C	ALL
ON	1	2	3	4	5	6	7	8	9	10
					ш.					
OFF										
10	OFF	ON	OFF	ON	OFF	OFF				
11	ON	ON	OFF	ON	OFF	OFF				
12	OFF	OFF	ON	ON	OFF	OFF	" <u></u> 2"	le	1	2
13	ON	OFF	ON	ON	OFF	OFF		All Call	Call	Group Call
14 15	OFF ON	ON ON	ON ON	ON ON	OFF OFF	OFF OFF	V Station Control on	A	S	S
15	OFF	OFF	OFF	OFF	OFF	OFF	tai		Group (dn
17	ON	OFF	OFF	OFF	ON	OFF	S S		20	S
18	OFF	ON	OFF	OFF	ON	OFF	rity		9	0
19	ON	ON	OFF	OFF	ON	OFF	Priority Remote C			
20	OFF	OFF	ON	OFF	ON	OFF	P &			
21	ON	OFF	ON	OFF	ON	OFF				
22	OFF	ON	ON	OFF	ON	OFF				
23	ON	ON	ON	OFF	ON	OFF				
24	OFF	OFF	OFF	ON	ON	OFF				
25	ON	OFF	OFF	ON	ON	OFF				
26	OFF	ON	OFF	ON	ON	OFF		TEN	TOFO	N
27	ON	ON	OFF	ON	ON	OFF				•
28 29	OFF ON	OFF OFF	ON ON	ON ON	ON ON	OFF OFF		C	1	
30	OFF					OFF				
31	ON	ON	ON	ON	ON	OFF		- C	$\mathbf{\tilde{c}}$	
32	OFF	OFF	OFF	OFF	OFF	ON		Ē		
33	ON	OFF	OFF	OFF	OFF	ON				
34	OFF	ON	OFF	OFF	OFF	ON		5	J	
35	ON	ON	OFF	OFF	OFF	ON		4		
36	OFF	OFF	ON	OFF	OFF	ON				
37	ON	OFF	ON	OFF	OFF	ON				
38	OFF	ON	ON	OFF	OFF	ON	www	ster	ntofo	n.com
39	ON	ON	ON	OFF		ON				
40	OFF	OFF	OFF	ON	OFF	ON	Zenite			
41	ON	OFF	OFF	ON	OFF	ON	P.O. E			/dalen
42	OFF	ON	OFF	ON	OFF	ON	Norwa		3LU	
43	OFF	OFF	OFF	ON	OFF	ON		.,		
44 45	OFF ON	OFF OFF	ON ON	ON ON	OFF OFF	ON ON	_			
45 46	OFF	OFF	ON	ON	OFF	ON			erves the designs	e right to and
40 47	OFF	ON	ON	ON	OFF	ON	spec	ification	ns witho	ut notice
48	OFF	OFF	OFF	OFF	ON	ON			nce of a s improv	policy of ement.
	ON	OFF	OFF	OFF	ON	ON				un. 2006
40		5.1	0.1	0.1	0.1	0.1				2000

Application and Feature Progamming

MASTER STATIONS STANDARD STATION

SW	FUNCTION	ON	OFF
4	Call time	30 sec.	8
5	Always Privacy	Yes	No
6	Receive Doorbell call #1	Yes	No
7	Receive Doorbell call #2	Yes	No
8	Tone for refused Silent Alarm call in queue	Yes	No
9	Silent Alarm on key 6 Last no. redial on key 6	Yes No	No Yes
10	Receive Silent Alarm	Yes	No

DIRECT DIAL 10-KEY STATION

SW	FUNCTION	ON	OFF
4	Call time	30 sec.	8
5	Always Privacy	Yes	No
6			
7			
8	Emergency Call on key 9	Yes	No
9	Dir. Dial Number Range		
10	Dir. Dial Number Range		

CAS OPERATOR STATION

SW	FUNCTION	ON	OFF
4	CAS Operator**	Master	Slave
5	T-key scrolls CAS queue	Yes	No
6	Receive Doorbell call #1	Yes	No
7	Receive Doorbell call #2	Yes	No
8	Alert tone when queue	3 sec.	Single
9	Silent Alarm on key 6 Last no. redial on key 6	Yes No	No Yes
10	Receive Silent Alarm	Yes	No

Switch Package U3				
SW 1 2 3	4 5 6 7 8 9 10			

STATION APPLICATION

SW1	SW2	SW3	FUNCTION
OFF	OFF	OFF	Standard Station
ON	OFF	OFF	Direct Dial 3-key Station
 OFF	ON	OFF	Direct Dial 10-key Station
ON	ON	OFF	Doorbell Station
OFF	OFF	ON	
ON	OFF	ON	
OFF	ON	ON	CAS Call-in Station
ON	ON	ON	CAS Operator Station

DIRECT DIAL NUMBER

SW9	SW10	KEY 0 - 9	KEY 0- 8 [#]
OFF	OFF	10 - 19	10 - 18
ON	OFF	20 - 29	20 - 28
OFF	ON	30 - 39	30 - 38
ON	ON	40 - 49	40 - 48

[#]If SW8 is ON, Emergency Call on key 9

User Guide A100K 10227, Installation and Programming Manual A100K 10226 and other Pro700 documentation can be downloaded from www.stentofon.com or ordered from your local dealer.

support@stentofon.com

DIRECT DIAL 3-KEY STATION

sw	FUNCTION	ON	OFF
4	Call time	30 sec.	8
5	Always Privacy	Yes	No
6			
7			
8	Emergency Call on key 9	Yes	No
9			
10			

SUBSTATIONS

DOORBELL STATION

-[SW	FUNCTION	ON	OFF
I	4	Call time	30 sec.	8
I	5	Doorbell no. on key 6	2	1
I	6	Doorbell tone on key 6	Single*	
	7	Doorbell no. on key 9	2	1
I	8	Doorbell tone on key 9	5 sec.	Single*
	9	Doorbell active time	30 sec.	2 min.
	10			

CAS CAL-IN STATION

SW	FUNCTION	ON	OFF	
4				
5	CAS call activation delay 3sec.			
6	Audio Monitoring	No		
7	Key for CAS call	Key 0	Key 9	
8	CAS acknowl. request tone	10 sec.	Single*	
9				
10				

* Connected to Program Distribution Channel

** One must be Master, one or two may be Slave