


# **BSWT-6T Loudspeaker Installation Guide**

Item Number	Item Name	Description
2131000137	BSWT-6T	On-wall speaker, 100V, IP65, 6W

## 1 Contents of the delivery

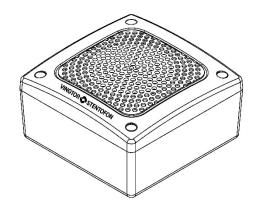

4 pcs rubber plugs for the fastening screws




4 screw 3.5 x 12 stainless steel for fastening the cover



4 screw 3.7 x 15 stainless steel for fastening the main box

# 2 Dimension and mounting details

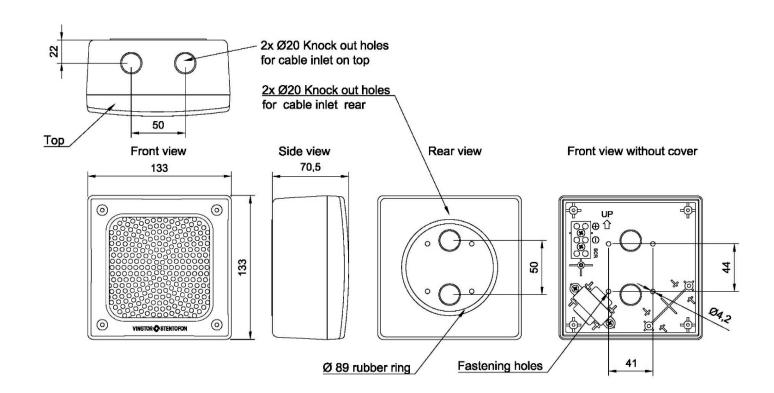

- Fastening the rear box to wall or ceiling by using the 4xscrew 3.7 x 15mm stainless steel or other suitable screws depending on the material of the surface
- Lead the cable through the cable inlet side by knocking out the two Ø20 holes or by using cable gland type M20. Cable inlet rear by knocking out two Ø20




If the rear cable inlet is used and the loudspeaker is mounted on plane surface, the rubber ring will replace cable glands

### **3 Connections**



#### Do not open loudspeaker when energized

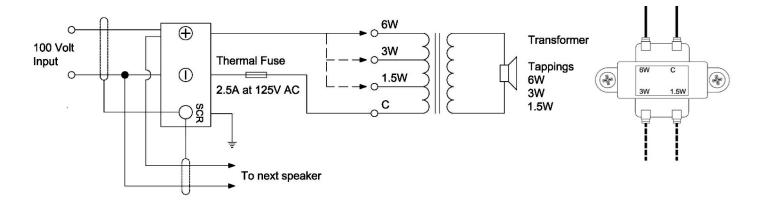

- Cable requirements:
  Approved ships cable 0,5 1,5 mm² with outer braided tinned copper screen. The screens must be interconnected and grounded in a common ground point in the central unit only
- Optional tapping 1.5W, 3W or 6W by changing cable position as shown in the figure. C is common



The loudspeaker must be connected to a 100V voltage amplifier line

## 4 Specifications

Dimensions	133 x 133 x 70,5 mm
Woofer size	3"
Mounting	Screw Mount
IP rating	IP-65
Operating temperature range	-20°C ~ + 70°C
Rated Power	6W
Max Power	10W
Power tapping	6-3-1.5W
Sensitivity SPL 1W / 1m	89dB
Sensitivity Max SPL, 1m	97dB
Rated Voltage	100V
Frequency range	150 ~ 16 KHZ
Termination	Ceramic Terminal Block With thermal fuse
Color	White RAL 9010
Weight	0.68 kg