zenitel



MR1301 Digital Audio Recorder/Player



This Quick Guide is for the MR1301 – The Digital Audio Recorder/Player. This highlights essential details for correct activation and playback of messages, configuration of the MR1301 when used with SPA-REM7 wired into the SPA-V2 system and how to make a dedicated stop function.

AUDIO FILES

Important to store audio files in MP3 for best results. It is possible with .WAV format but for this format it is very strict to follow sampling and bit rate instructions in user manual (Page 15). Note: Wrong settings for WAV file you may experience messages are being played too slow or too fast.

PLAYBACK MESSAGES

Start message

1) Press message button to be played

Stop message

- 1) Press same button to stop ongoing message, or
- 2) Overrule by starting message with higher priority, or
- 3) Press dedicated STOP button (see below for this function)


CONFIGURATION OF MESSAGES AND DEDICATED STOP BUTTON

On the player you are able to see by LED indicator which message is being played. This is not possible on push button panel SPA-REM7. For this reason, a dedicated STOP button may be preferred. The MR1301 do not have a prioritized terminal for this function.

Message 1 = priority 1 why it is necessary to place STOP button function as first position in the configurator. The function shall be put in the recorder as a delay. This is a function within the configurator for the recorder/player. Time can be set to 0 seconds to avoid an actual delay.


Setup function of STOP button (highest priority)

- 1) Select message button MSG 01
- 2) Add delay
 - a. In Delay tap number to 0
- 3) Press "Add"

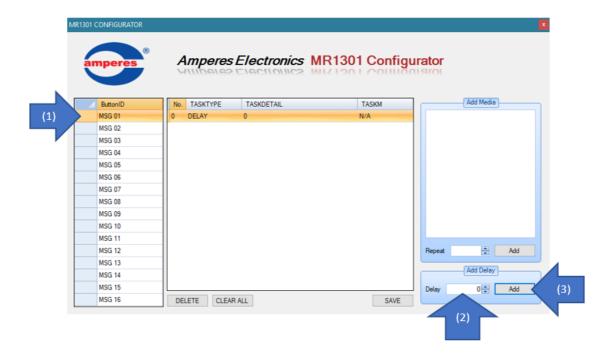

SPA-V2 SYSTEM: LINK BETWEEN MR1301 AND SPA-REM7

Connection and link in SPA-V2 systems prewiring for MR1301 and SPA-REM7 are as follow:

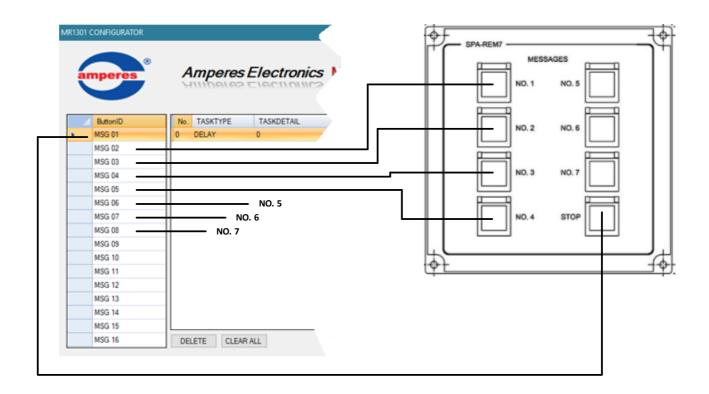

First message to play at SPA-REM7 named NO. 1 will be the corresponding ButtonID MSG 02 in the MR1301 Configurator.

Priority table

Messages are prioritized in the following order.

MR1301	SPA-REM7	Priority
MSG 01	STOP	1
MSG 02	NO. 1	2
MSG 03	NO. 2	3
MSG 04	NO. 3	4
MSG 05	NO. 4	5
MSG 06	NO. 5	6
MSG 07	NO. 6	7
MSG 08	NO. 7	8