



# zenitel

because communication is critical



## Quick Guide

### MR1301 MkII Digital Audio Recorder/Player



**This Quick Guide is for the MR1301 MkII – The Digital Audio Recorder/Player. This highlights essential details for correct activation and playback of messages, configuration of the MR1301 MkII when used with SPA-REM7 wired into the SPA-V2 system and how to make a dedicated stop function.**


## MR1301 MKII

In the new generation of the MR1301 MkII the configurator is now to be found directly on the unit via a web-based user interface. Previous use of SD-card is now replaced with internal storage of 14Gb free for message library.

Default access to web interface is IP address 192.168.0.100

Username: admin

Password: admin

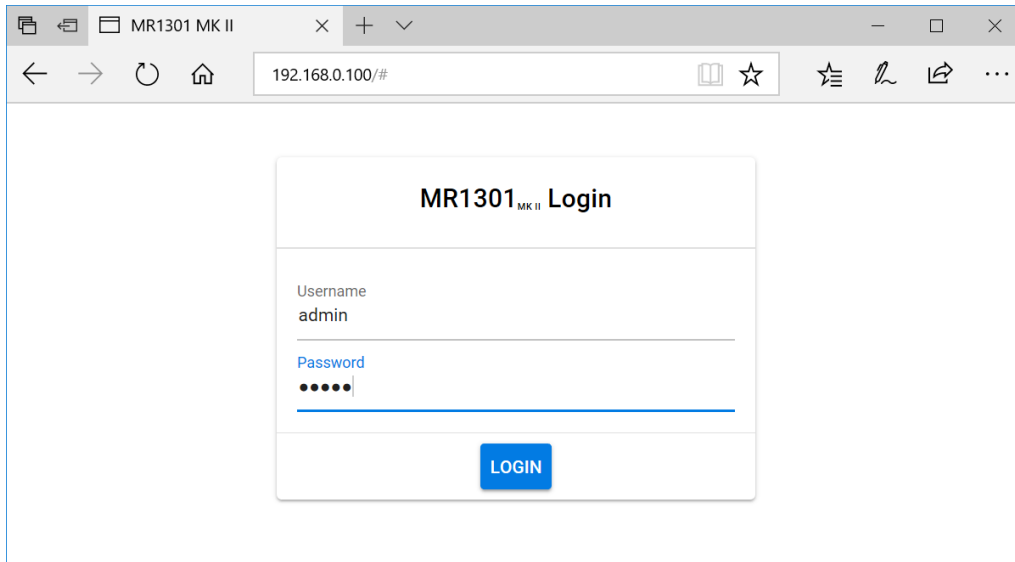

As in the previous model some configuration can also be done directly on the front panel of the unit.

## AUDIO FILES

MP3 and WAV files formats.

## PLAYBACK MESSAGES

Start message

- 1) Press message button to be played

Stop message

- 1) Press same button to stop ongoing message, or
- 2) Overrule by starting message with higher priority, or
- 3) Press dedicated STOP button (see below for this function)


## CONFIGURATION OF MESSAGES AND DEDICATED STOP BUTTON

On the player you are able to see by LED indicator which message is being played. This is not possible on push button panel SPA-REM7. For this reason, a dedicated STOP button may be preferred. The MR1301 MkII do not have a prioritized terminal for this function.

Message 1 = priority 1 why it is necessary to place STOP button function as first position in the configurator. The function shall be put in the recorder as a delay. This is a function within the configurator for the recorder/player. Time can be set to 0 seconds to avoid an actual delay.


### Setup function of STOP button (highest priority)

- 1) Select message button 1 (MSG KEY 1)
- 2) Add delay
- 3) In Delay enter preferred delay
- 4) Save

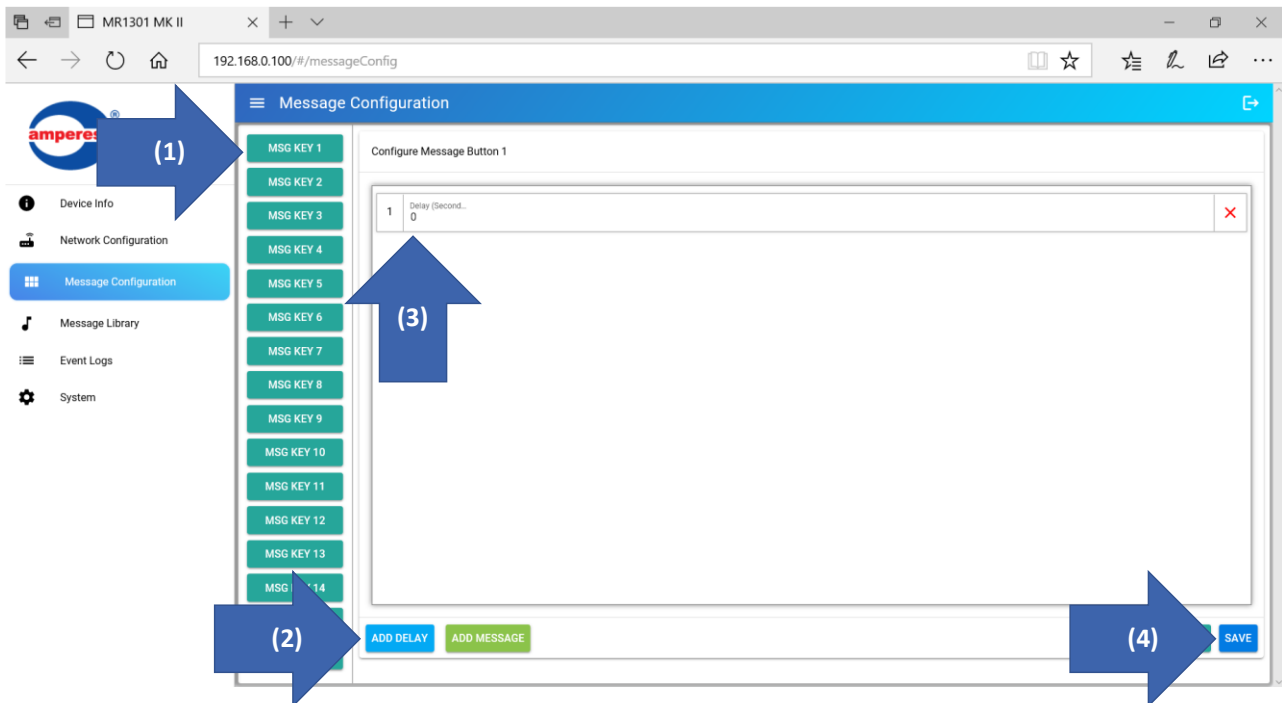

## SPA-V2 SYSTEM: LINK BETWEEN MR1301 MKII AND SPA-REM7

Connection and link in SPA-V2 systems prewiring for MR1301 MkII and SPA-REM7 are as follow:

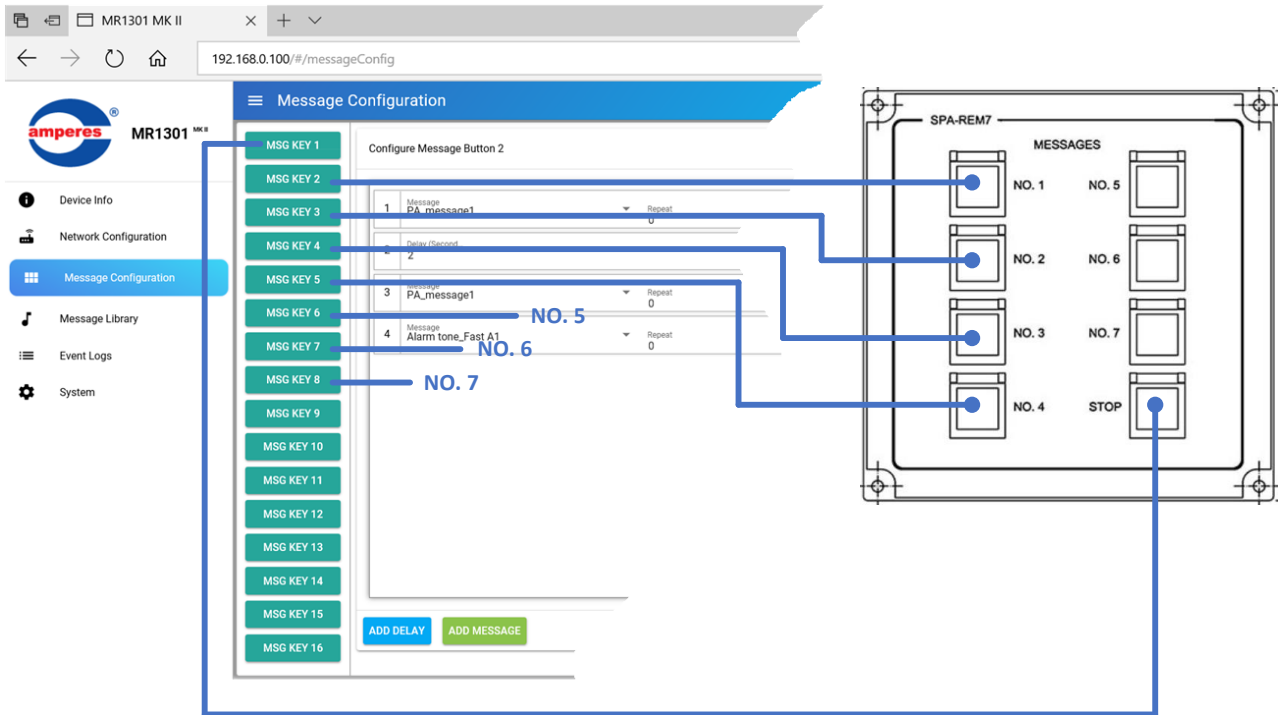

First message to play at SPA-REM7 named NO. 1 will be the corresponding Message Button 2 (MSG KEY 2) in the MR1301 MkII configurator.

### Priority table

Messages are prioritized in the following order.

MR1301	SPA-REM7	Priority
MSG KEY 1	STOP	1
MSG KEY 2	NO. 1	2
MSG KEY 3	NO. 2	3
MSG KEY 4	NO. 3	4
MSG KEY 5	NO. 4	5
MSG KEY 6	NO. 5	6
MSG KEY 7	NO. 6	7
MSG KEY 8	NO. 7	8